

AVR 911 SERIES
(AUTOMATIC VOLTAGE REGULATOR)

Email: info@powersystems.com.au
Web Site: www.powersystems.com.au

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

1. INTRODUCTION

The AVR 911 is a solid state device which is designed to give accurate and stable voltage regulation of alternators. It is a full wave design AVR.

The AVR is suitable for regulating 50 or 60Hz brushless rotating stationary field alternators regardless of prime mover type and will replace most electronic regulators with or without separate excitation.

IT IS IMPORTANT THAT FIELD RESISTANCE IS GREATER THAN 25 OHMS.

The AVR is suitable for one or three phase alternators and has four selectable voltage sensing ranges available. ie. 120, 208, 240 and 415V.

The AVR is suitable for parallel operation of alternators with quadrature droop facilities with only an additional standard of 5 amp current transformer and resistor being required.

The AVR has several features:

- Voltage adjustment \pm 10% over each range
- Wide range of stability
- Underspeed adjustment which will provide voltage droop with large motor starting loads, this feature will provide excellent starting characteristics and prevent unnecessary stalling of the prime mover
- Remote voltage adjustment available
- Transformer isolated voltage sensing

2. OPERATION

The regulator senses the alternator output and derives excitation power from the phase connections of the alternator output.

Regulation and stability is maintained provided the prime mover speed is within governor class A1 to IS03046, at any machine load or power factor by comparing the sensed voltage with an internal reference point.

The unit constantly adjusts the field excitation level to compensate for voltage difference between the sensed voltage and reference.

Output voltage of the machine will be held to \pm 1.5% including cold to hot variations in ambient conditions of -10 degrees to +60 degrees and engine speed changes of \pm 4% from preset nominal.

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

3. CONSTRUCTION

The assembled PCB is solidly mounted in a folded aluminium housing which provides the necessary mechanical protection and is suitable to mount directly in the alternator terminal box or in the separate control cubicle.

All components used are selected for stable operation in ambients ranging from -10 degrees to 70 degrees and severely capacity derated for high reliability.

The printed circuit board is a 1.5mm reinforced fibreglass with double sided tracks and plated through holes.

4. CONTROLS

There are 4 standard and one optional control on each AVR

a. STABILITY I - R9

This potentiometer adjusts the stability and response of the alternator and should initially be set in a counter-clockwise position and rotate clockwise to give optimum stability and response characteristics. Once set, no further adjustment should be necessary.

Full CCW position gives maximum response, minimum stability.

Full CW position gives minimum response, maximum stability.

b. VOLTAGE ADJUST - R5

This potentiometer varies the reference voltage and hence the amount of excitation of the alternator which adjusts the output voltage over a range of $\pm 10\%$.

An external 5K potentiometer may be added to terminals P.P. for remote panel voltage adjustment. When this is used the loop on P.P. is removed and the internal pot is turned to maximum.

c. UNDERSPEED - R18

This potentiometer sets the frequency at which voltage drooping with speed will occur.

For example, if set at 48Hz and a large motor is started which falls temporarily overloads the prime mover on starting, once the speed falls to 48Hz the alternator voltage will decrease and act as an automatic reduced voltage starter and greatly assist in motor starting.

d. STABILITY II - Located on PCB next to IC.I - R10

This potentiometer widens the range of stability and should always be normally fully anti-clockwise and only adjusted slightly clockwise to counter further stability should 'Stability I' run out of range particularly on single phase machines.

Set stability II fully anti-clockwise for 3 phase or clockwise for 1 phase.

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

5. ADJUSTMENTS

a. VOLTAGE

The AVR sensing voltage must be first selected for the required sensing voltage. Adjacent to the transformer are four pins connected to the relevant pin to match the available sensing output of the alternator. 120, 208, 240 and 415 volts.

Note:

If replacing the other electronic regulators for convenience use the same sensing connections if possible.

b. STABILITY

Rotate clockwise to increase stability.


To check if after sudden load change prolonged fluctuation occurs, turn stability slightly clockwise, or if voltage is very slow to recover from load changes then counter clockwise.

c. UNDERSPEED

To adjust the alternator must be running at the correct speed. ie. 50Hz \pm at no load.

Connect an AC voltmeter across the output of the alternator and slowly turn the underspeed potentiometer clockwise until the voltage just starts to fall, then turn slightly counter-clockwise approximately 30 degrees.

To check, apply full load if possible and voltage should not droop more than 1% or alternatively lower speed to 48Hz and voltage should droop.

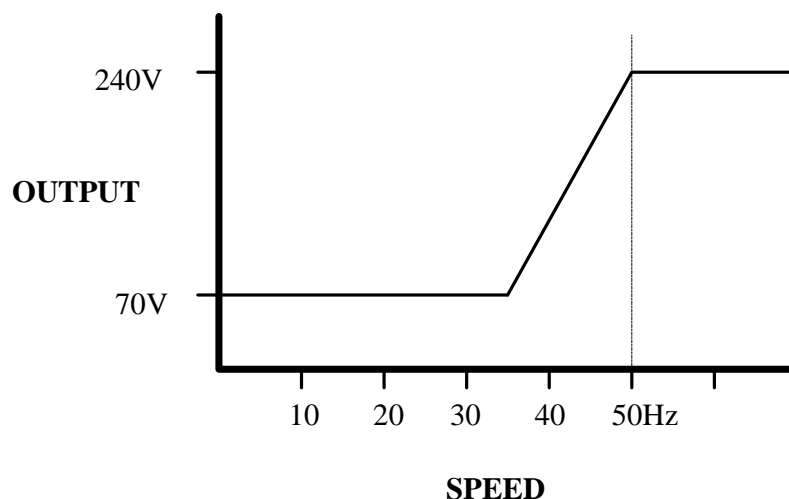


Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

6. CONNECTIONS

a. STANDARD 3 PHASE 4 WIRE

Figure 1

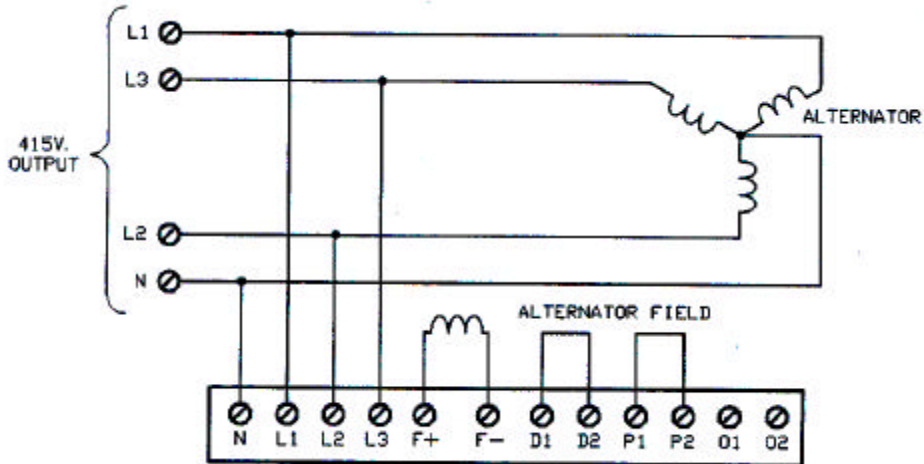


TRANSFORMER TAP SELECTIONS

- (a) 415/240V - 415 tap
- (b) 208/120V - 208 tap

b. STANDARD 1 PHASE 2 WIRE

Figure 2

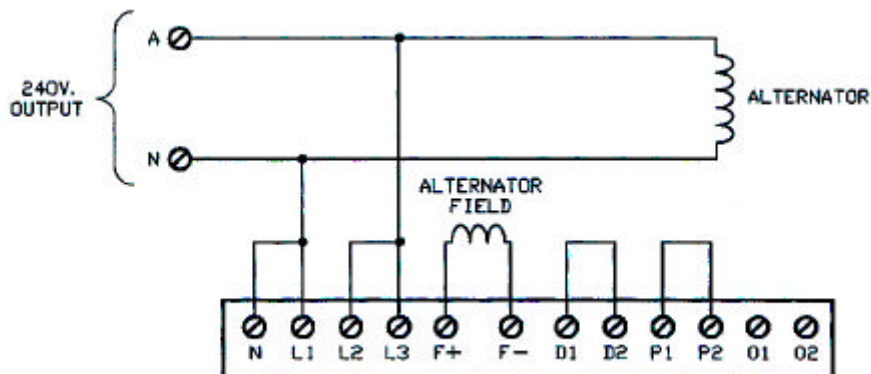

TRANSFORMER TAP SELECTIONS

- (a) 240V - 240V tap
- (b) 120V - 120V tap

Note:

- F- = XX AND F+ = X ON SOME MACHINES

TRANSFORMER TAP SELECTIONS

- (a) 415/240V - 415V tap
- (b) 208/120V - 208V tap

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

7. RADIO INTERFERENCE

Additional RFI suppression can be achieved by connecting a 0.47MFD capacitor, rated at 250 volt AC between terminals N & L3.

8. DROOP FACILITY

The AVR has quadrature droop facilities for parallel operations.


Quadrature droop allows load sharing of reactive load (KVAR) only since KW load is a function of the prime mover.

A current transformer with 5 amp output at 10V A secondary rating and ratio of twice the alternator output is required.

When this is used the loop between D1 and D2 must be removed.

The current transformer must be connected in the blue phase or L3. It is to be noted that the AVR senses Red L1 and Yellow L2 phase voltage and to achieve quadrature droop, current must be sensed in the blue L3 phase.

Figure 3

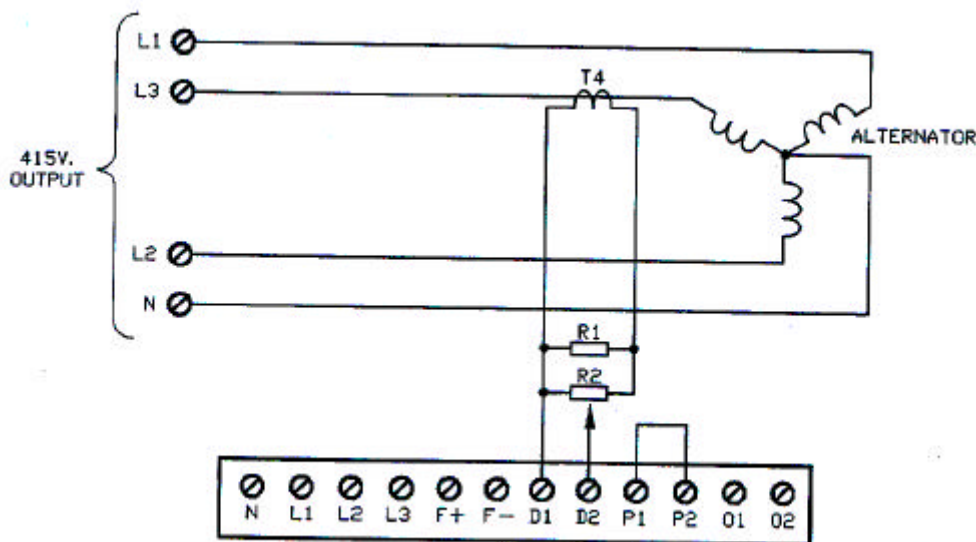

R1 1 ohm 25W

R2 adjustable ohm 2W


Notes:

R2 must be adjusted on both plants to give same voltage drop (approximately 5V/100%) for equal % of load for correct KVAR load sharing.

If rising voltage with load is detected the current transformer primary current flow direction must be reversed by reversing the transformer body. ie. Remove the primary turns and rotate transformer 180 degrees and reconnect secondary; or swap position of secondary wires.

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

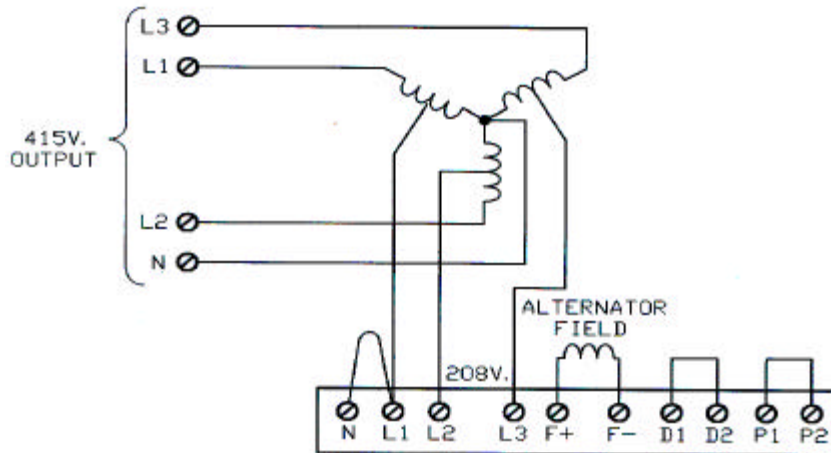

415 Volt Alternator with 3 ϕ 3 wire centre tap (208V) sensing & supply .

9. SPECIFICATIONS

Voltage range 120, 208, 240, 415 volts
Selectable taps \pm 10% adjustments on each range
Maximum field current 10 amps
SCR's rated at 10 amps 800 volts
Suitable for single and three phase alternators
Regulation \pm 1.5% (1% can be attained on some machines)
Temperature -10 degrees to 60 degrees
Underspeed adjustment 10Hz - 55Hz
Residual voltage required for reliable excitation 3-5 volts
Minimum field resistance 25 Ohms
Field voltage 100% of input sensing voltage


10. REMOTE VOLTAGE CONTROL

The AVR has remote voltage facilities where the voltage range can be varied up to 10%.

Remove bridge from P.P. and fit external 5K linear 2W potentiometer. Turn the pot on the AVR fully clockwise so as to have maximum voltage range.

It is necessary to use screened cable for remote control, connect as figure 5.

Figure 4

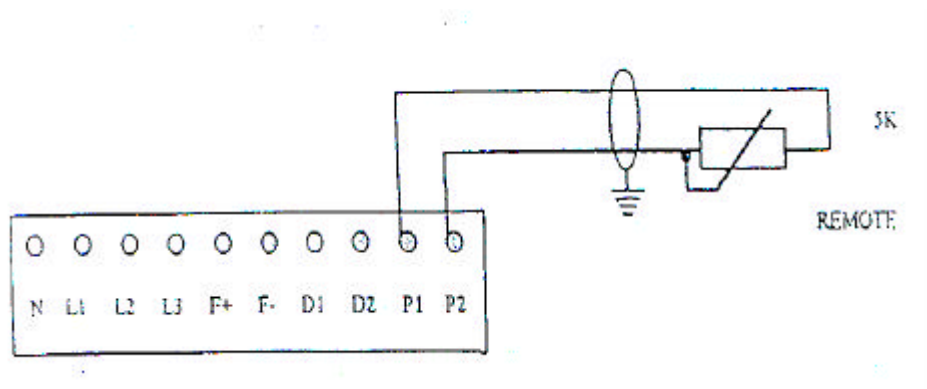


Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

POWER & SENSE SCHEMATIC

Figure 5

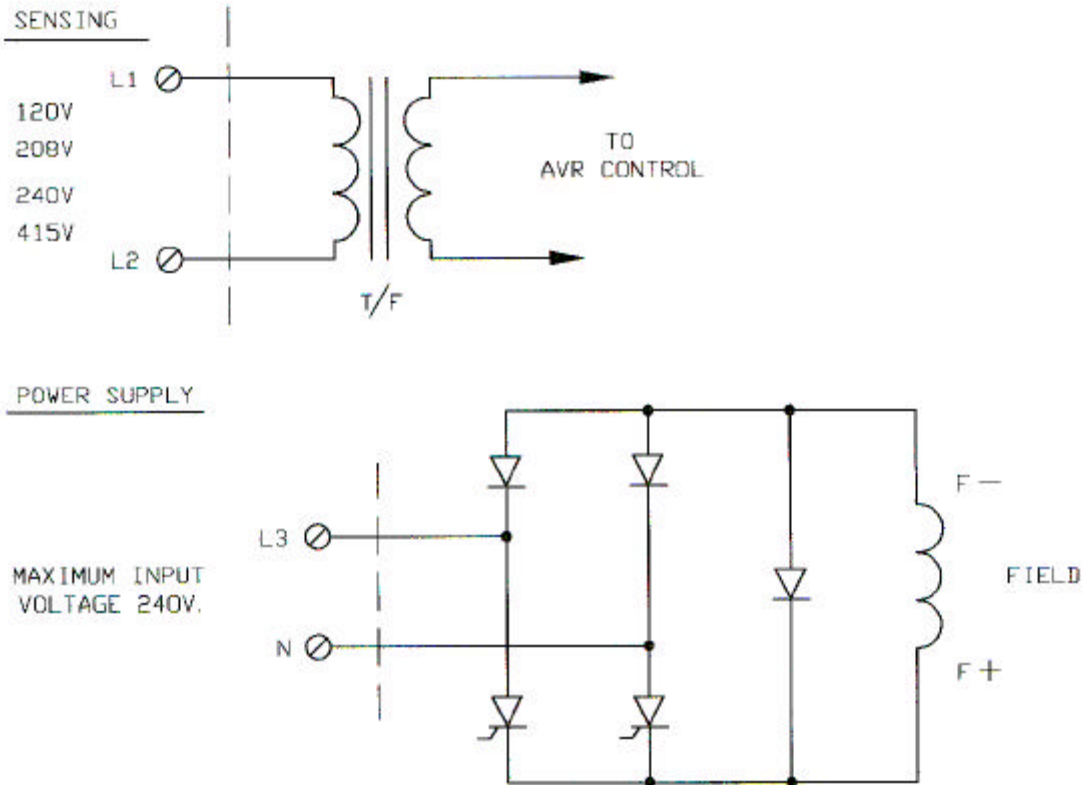


12. BENCH TEST

The AVR can be bench tested as follows

a. TEST CIRCUIT

Figure 6

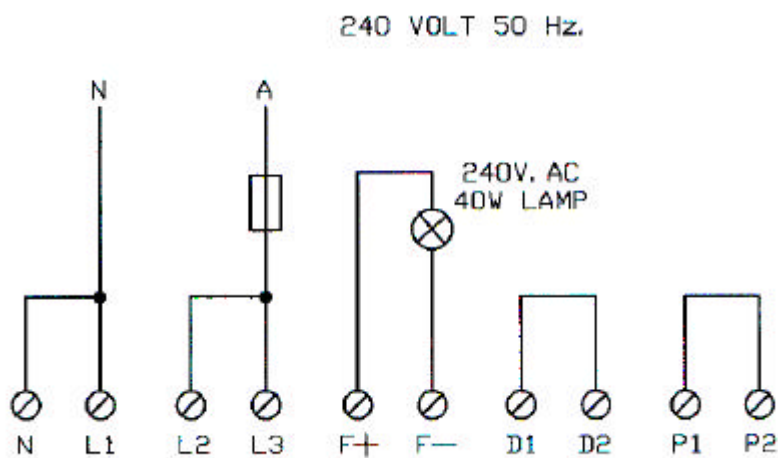

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

b. AVR TEST SETUP

TRANSFORMER TAP SELECTIONS

(a) 240V - 240V tap

c. TEST EQUIPMENT REQUIRED

A 240V 40 Watt globe, complete with holder and wire
3 pin 240 volts mains plug and lead
Mains supply

d. PROCEDURE


1. Remove AVR from generator
2. Connect as above and select transformer tap to 240 volt position (Note the original sensing voltage tap position)
3. Mark position of voltage adjusting potentiometer with biro or pencil (This enables the potentiometer to be returned to its original position)
4. Turn voltage adjusting potentiometer fully clockwise
5. Turn on the 240 volt supply
6. 240 volt globe should be illuminated
7. Turn 240 volt supply off (Reset the overload)
8. Turn the voltage potentiometer fully anti-clockwise
9. Turn 240 volt supply on
10. 240 volts globe should just flash and then remain off.
11. Turn the voltage adjusting potentiometer back to the original position or just passed. If the AVR was set to 240 volts as the mains then the light should again come on and go off
12. If the AVR operates as the test procedure then the fault may be in the alternator
13. Reconnect to the alternator making sure the T/F sensing tap is returned to its correct position and try again

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

13. COMPONENT LAYOUT

Figure 7

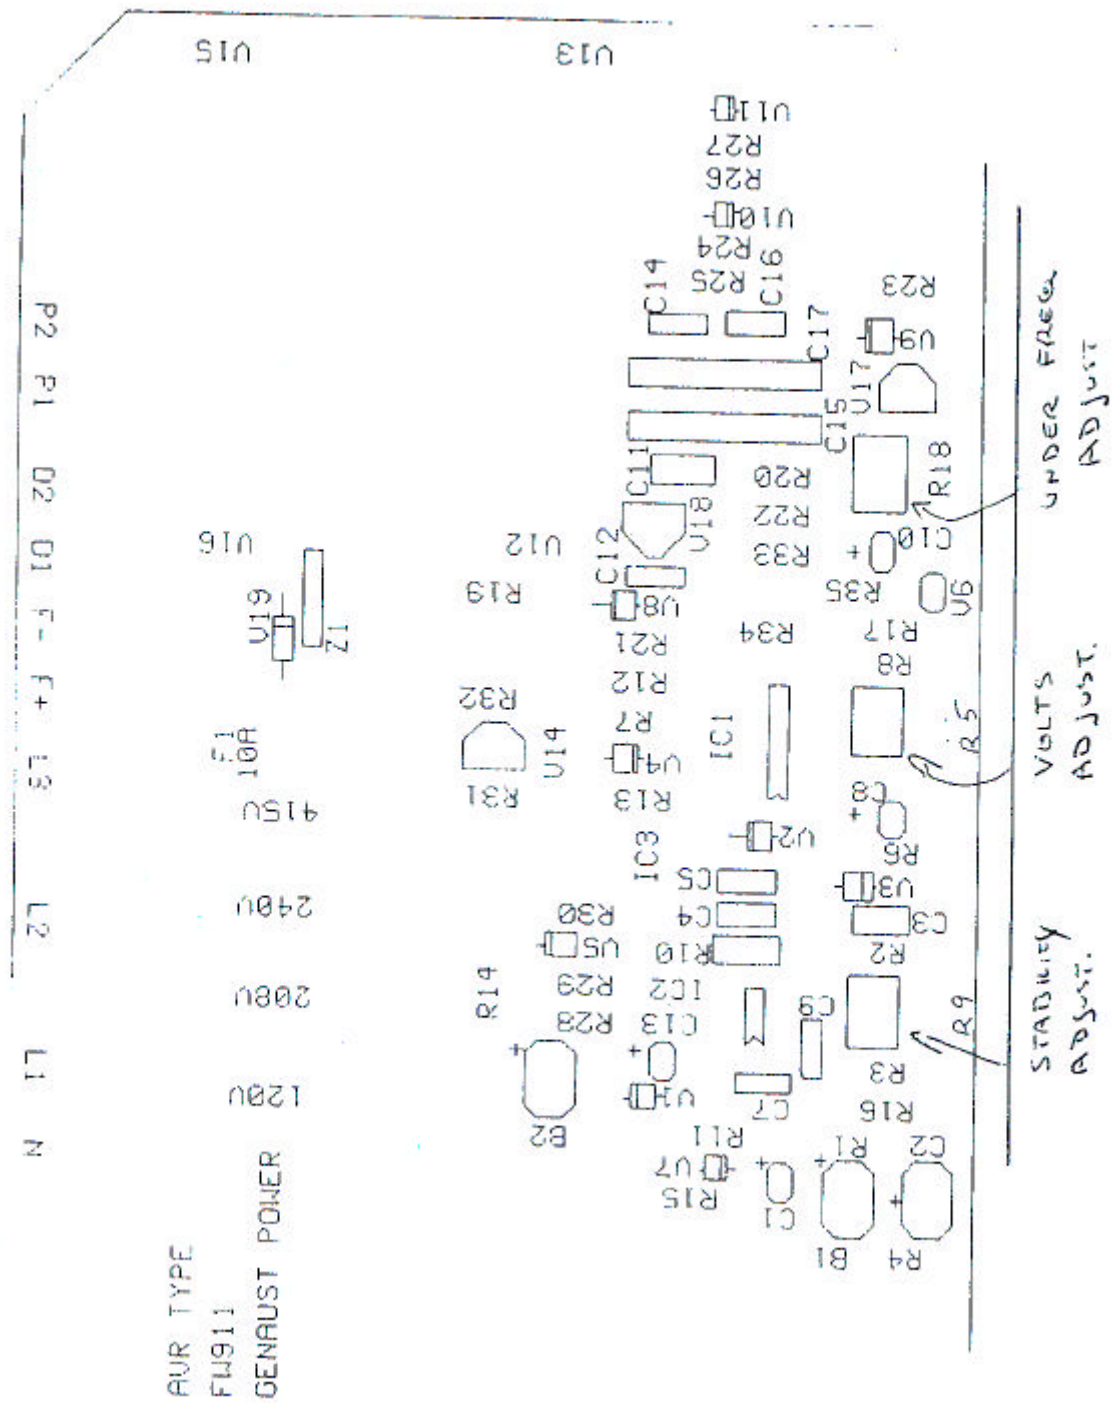

Power Drive Systems

AVR 911 AUTOMATIC VOLTAGE REGULATOR

WARRANTY CLAIM PROCEDURE

- (a) On identifying a possible component fault advise the company in writing the model and serial number of the component and major assembly it is part of as well as fault details.
- (b) Remove and return the faulty component to the company following any tests or checks requested by the company.

BASIC WARRANTY CONDITIONS

- (a) The warranty is a 12 month back to base warranty where the customer is liable for the re delivery costs.
- (b) Items modified without the companies knowledge or approval may not be warrantable.
- (c) If the company is required to inspect / remove or reinstall any part of the goods, the customer will be liable for any out of pocket expenses.
- (d) Major third party items such as engines and alternators are subject to the original manufacturers warranty only.
- (e) The warranty does not cover inter alias, loss of damage due to accident misuse or fair wear and tear.

WARRANTY REGISTRATION

CUSTOMER NAME: _____

ADDRESS: _____

TELEPHONE No: _____ **FAX No:** _____

ITEM MODEL No: _____ **SERIAL No:** _____

SUPPLIER NAME: _____

DATE PURCHASED: _____